

What to do if...  
What to do if...



A tire punctures.

P. 611 If you have a flat tire



The hybrid system does not start.

P. 619 If the hybrid system will not start

P. 113 Immobilizer system

P. 628 If the 12-volt battery is discharged



The shift lever cannot be moved out.

P. 621 If the shift lever cannot be shifted from "P"



The high coolant temperature warning light comes on.

P. 631 If your vehicle overheats



Steam can be seen coming from under the hood.



The key is lost.

P. 624 If you lose your keys



The 12-volt battery runs out.

P. 628 If the 12-volt battery is discharged



The doors cannot be locked.

P. 63 Doors



The horn begins to sound.

P. 115 Alarm



The vehicle is stuck in mud or sand.

P. 635 If the vehicle becomes stuck



A warning light or indicator light comes on.

P. 599

If a warning light turns on or a warning buzzer sounds...



## nWarning lights



Brake system warning light (red indicator)

or



P. 599



"ABS" warning light

or



P. 600



Brake system warning light (yellow indicator) P. 600



Low fuel level warning light P. 601



SRS warning light P. 600



Open door warning light P. 601



Charging system warning light P. 599



Malfunction indicator lamp

or



P. 600



Driver's seat belt reminder light P. 601



Front passenger's seat belt reminder light P. 601



High coolant temperature warning light P. 601



Master warning light with warning message P. 601



Electric power steering warning light P. 600



Pre-collision system warning light P. 600



Tire pressure warning light P. 601